

SAMSUNG

SERIES **8+**  
8500

# QUICK START GUIDE



BN68-05530A-02

Attach the TV to the Stand

Step 1

Connect video devices

Step 2

Using the Smart Touch Control

Step 3

Power on and start the initial setup

Step 4



**Warning:** Screens can be damaged from direct pressure when handled incorrectly. We recommend lifting the TV by the edges, as shown.



## Welcome to your new Smart TV!

The following instructions cover assembling, connecting, and setting up your new TV. Make sure you have the accessories listed below.

### Included in this box

#### Remote Control



Smart Touch Control



Batteries (AAA x 4)



Remote Control

#### Stand Parts and Cables



Cable clip



Power cord



IR extender



RCA adapter



Component adapter



Blanking Bracket




Rubber packing

Also included: User Manual, regulatory guide, 3D Active Glasses


## Step 1 Attach the TV to the Stand

1A

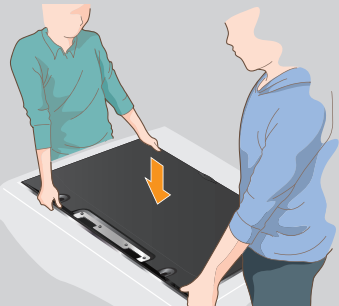


Lay the TV on a soft surface, screen side down. Use the packing material to protect the screen.

1B

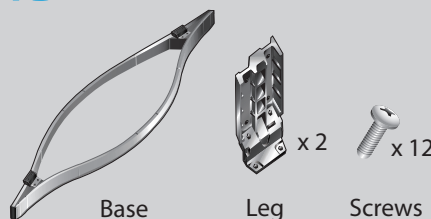


Draw the base, legs, and screws out of the box to put them together into the stand.

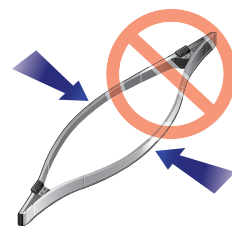


⚠ Don't apply pressure to the base, as illustrated by the figure.

**REQUIRED TOOLS:** a Phillips head screwdriver and a soft, flat surface larger than the TV (such as the box).


1C

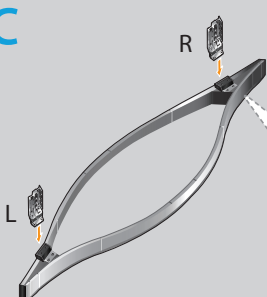


Fit the stand and mount together, making sure the notch on the mount aligns with the stand.

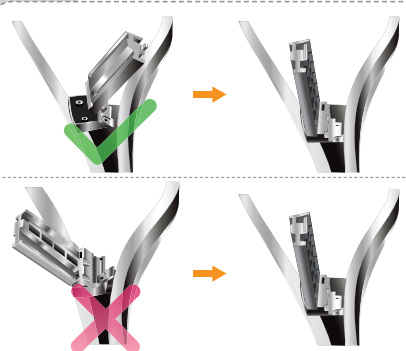

1D

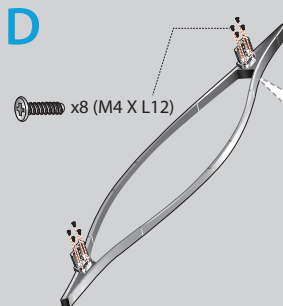


Insert 4 screws and secure the stand to the TV.

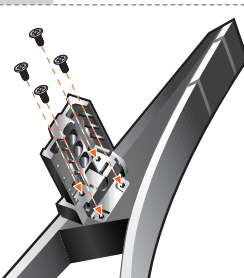


1E



Remove the protection film from the bottom of the TV and stand, as shown by the illustration.


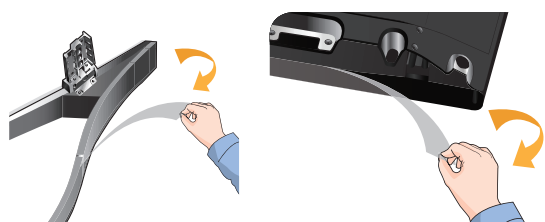


1F

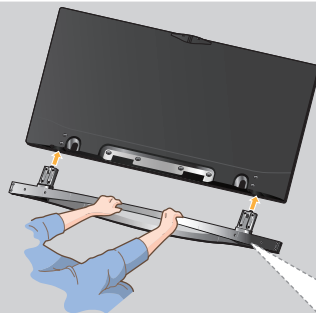


Holding the stand parallel to the screen, slide the stand into the notches on the back of the TV.


Fit the guide protrusion on each edge of the stand in the matching hole on the sole of the TV.

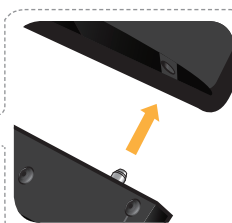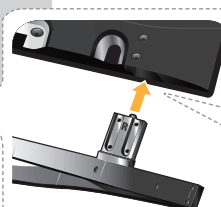


1G

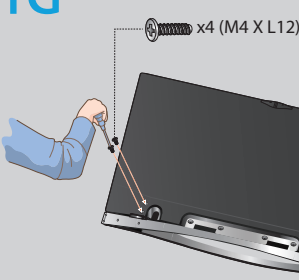


Insert 2 screws and secure the stand to the TV.

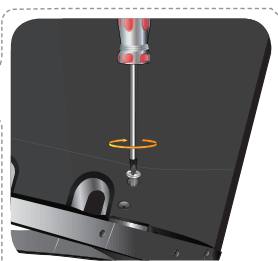

**Warning:** Handling the TV incorrectly can result in injury. After setting the stand into the TV, we recommend not lifting the TV using the stand. Lift it by grabbing the front and bottom, as shown.

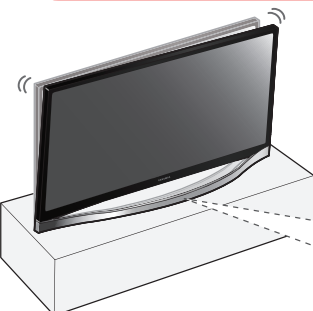

Placing the TV on an uneven surface may cause the TV to shake. If placing the TV on an uneven surface, use the provided rubber packing to secure the TV stand. See the figure below and attach the provided rubber packing to the TV stand.

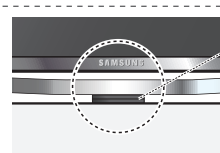

Rubber packing

## Step 2


## Connect video devices

We suggest using HDMI connections whenever possible for the best picture quality. Use the included AV adapter to connect older devices.

- Please check the shape of the plugs to avoid inserting them upside down.
- The appearance of your TV may differ from the images below, depending on the model.

**Power Input**

Plug in after you have made all other connections.




**Good Connection: Component (Y, PB, PR) or AV (Composite)**


Match the colors on your device's cables to the colors on the device's out ports. Connect the device's cables to the included adapters, and then connect the adapters to the appropriate ports on the TV as shown in the table below. Make sure the colors match. The Component connection is shown on the top. The AV connection is shown on the bottom.


AV IN 1			Audio (L/R)
COMPONENT IN			Video
AV IN 2			Audio (L/R)
			Video

Connect the cable from the antenna or cable TV outlet.



Wired Ethernet



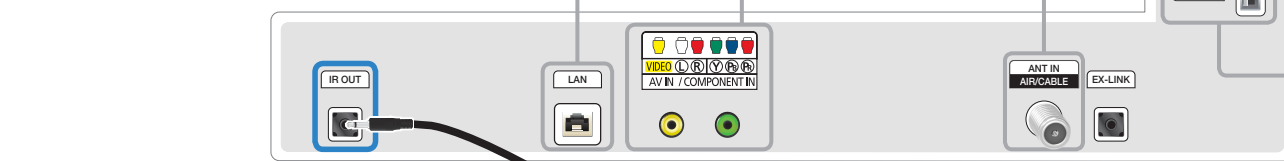


**TV Camera**

Press the camera down to activate it. The camera enables voice recognition and motion control for your TV.

Use the Scroll wheel on the back of the camera to adjust the camera's angle.




**Best Connection : HDMI**


We suggest using HDMI whenever possible.

**HDMI 1** is the default port for a cable or satellite set-top box.

Use the other ports for Blu-ray players, game consoles, and other devices.

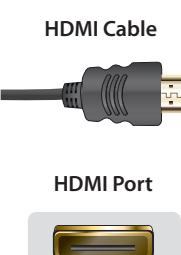


You can connect home theater systems to the OPTICAL or AUDIO OUT ports.

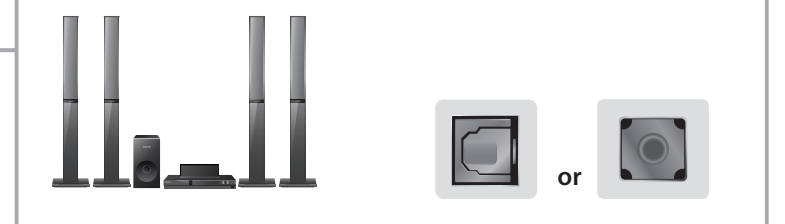


**USB Connections**

You can connect USB storage devices to the USB ports and enjoy personal photos, videos, and music.



Connect the IR extender to the IR Out port to control external devices connected to the TV using the Smart Touch Control. For more detailed information, refer to the "Universal Remote Control Setup" section in the User manual.

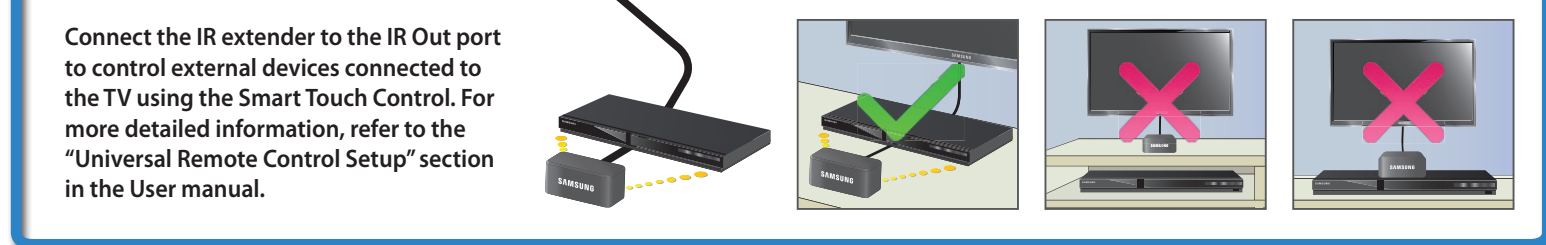


## Step 3

## Using the Smart Touch Control


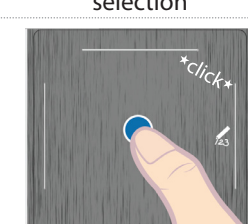
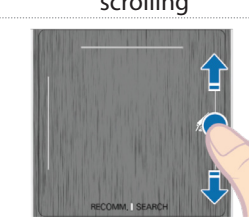
### Insert the batteries into the Smart Touch Control

Insert the tip of a credit card or similar item into the notch on the side of the Smart Touch Control, and then twist the card to open and remove the remote's back cover.

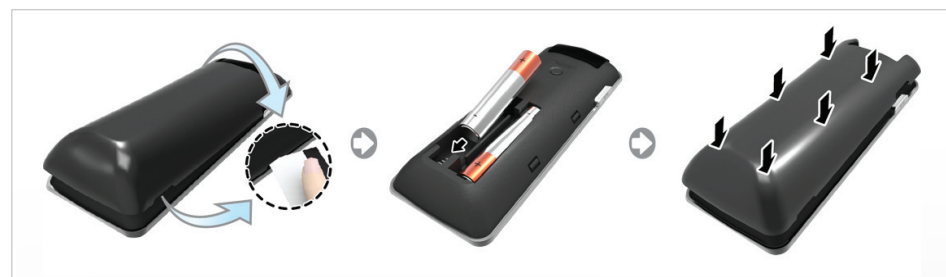

The notch's location may vary depending on the type of Smart Touch Control provided.

### Using the touch pad

navigation	selection	scrolling
		
To control the highlight, move your thumb across the pad.	To select an item, press the pad until you hear a click.	Move your thumb along the ridges to quickly scroll through items.

### Pairing the Smart Touch Control

If you need to reestablish the connection between the TV and the Smart Touch Control, press the pairing button at the back of the Smart Touch Control, pointing at the remote control sensor of the TV.

## Step 4

## Power on and start the initial setup

### Information required:

- Wi-Fi network password (if you use one)
  - Zip code
  - Cable or satellite provider info
- Plug in the TV. Press the power button on the remote to turn on the TV and start the initial set-up.
- The TV must be connected to the Internet to use the Smart Features. If you have a wireless network, confirm that your network router is working before you start the initial setup. If you have a wired network, connect the TV to the network with a CAT 7 cable before you begin.

## Troubleshooting

### The stand is wobbly or crooked

Make sure the stand is properly assembled.

### The TV won't turn on

Make sure all cables are fully inserted, and that the remote has batteries installed.

### I don't know where to plug in <device>

Devices without HDMI may require the included A/V adapter.

### I have extra parts

The TV includes some optional parts to help with wall mounting and cable routing.



If you experience issues, please do not take the TV back to the store.

In the United States of America, call us at 1-800-SAMSUNG (1-800-726-7864) or visit us at [www.samsung.com](http://www.samsung.com) or [www.samsung.com/spsn](http://www.samsung.com/spsn) for support and warranty service.

For other countries, refer to "Contact SAMSUNG WORLDWIDE" in the user guide.

**Congratulations on your new Smart TV!**